
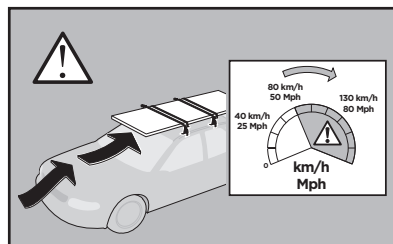
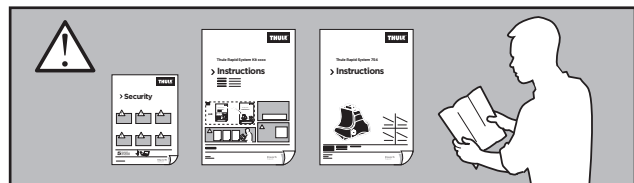
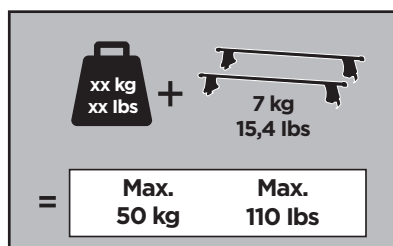


Thule Rapid System Kit 1072

> Instructions

MERCEDES A-Class, 5-dr Hatchback, 98-00

MERCEDES A-Class (W168), 5-dr Hatchback, 01-04

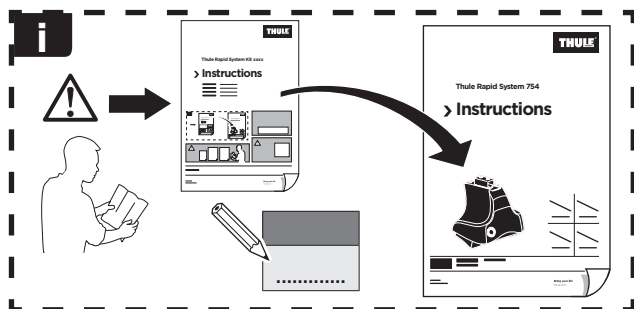

ISO 11154-E


141072

C.2013/0107
519-1072-01

Bring your life
thule.com



03 x4




013 x2



164 x2






x1



x1

1

	X (scale)	X (mm)	X (inch)
MERCEDES A-Class, 5-dr Hatchback, 98-00	32	971	38 1/4
MERCEDES A-Class (W168), 5-dr Hatchback, 01-04	32,5	976	38 3/8

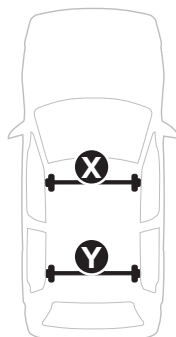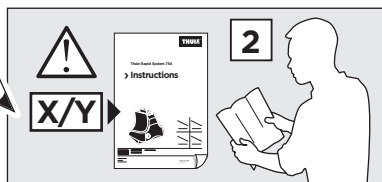
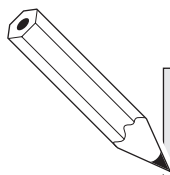


	Y (scale)	Y (mm)	Y (inch)
MERCEDES A-Class, 5-dr Hatchback, 98-00	25,5	906	35 5/8
MERCEDES A-Class (W168), 5-dr Hatchback, 01-04	26	911	35 7/8


2

MERCEDES A-Class, 5-dr Hatchback, 98-00

MERCEDES A-Class (W168), 5-dr Hatchback, 01-04

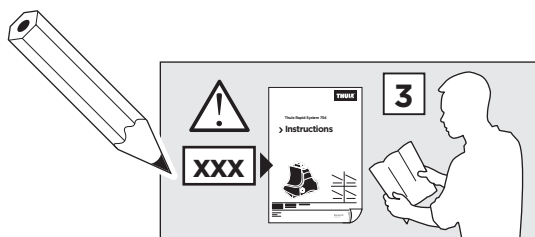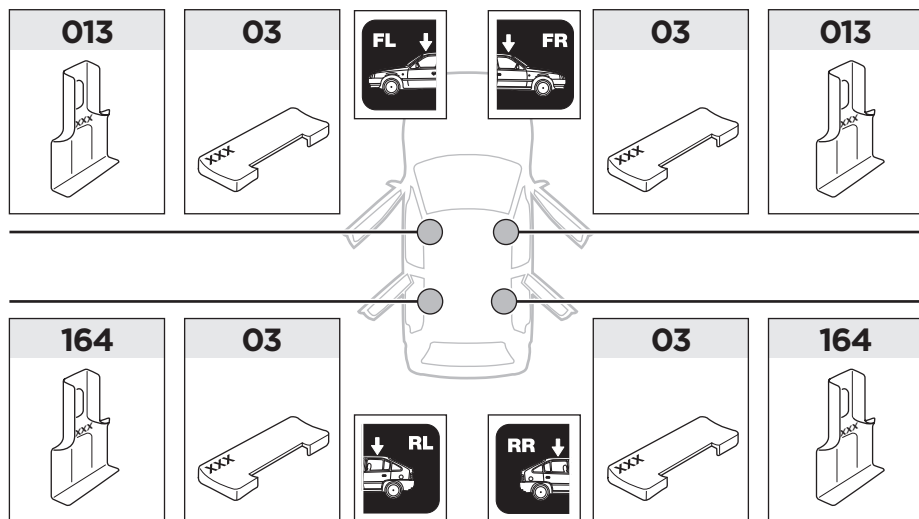

3

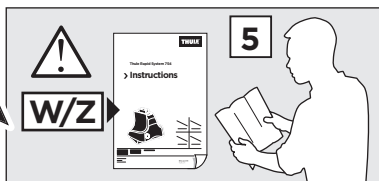

	W (mm)	Z (mm)	W (inch)	Z (inch)
MERCEDES A-Class, 5-dr Hatchback, 98-00	130	650	5 1/8	25 5/8
MERCEDES A-Class (W168), 5-dr Hatchback, 01-04	130	700	5 1/8	27 1/2

