
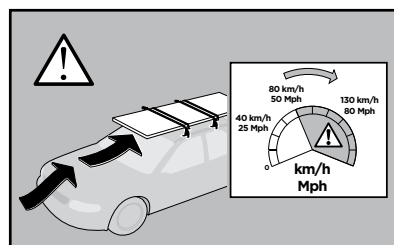
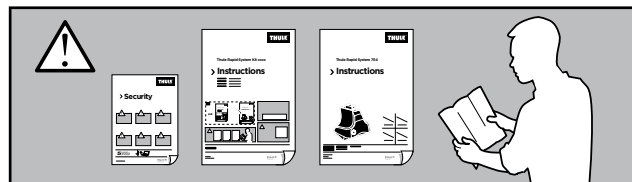
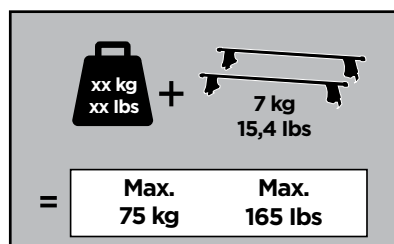


Thule Rapid System Kit 1182

> Instructions

MITSUBISHI Pajero, 5-dr SUV, 99-06

MITSUBISHI Montero, 5-dr SUV, 99-06


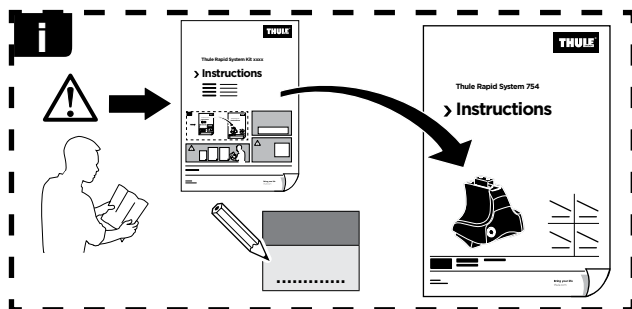


ISO 11154-E


141182

C.20121003
519-1182-01

Bring your life
thule.com

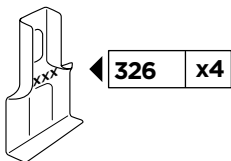



x1



x1

1

	X (scale)	X (mm)	X (inch)
MITSUBISHI Pajero , 5-dr SUV, 99-06	44,5	1096	43 ¹ / ₈
MITSUBISHI Montero , 5-dr SUV, 99-06	44,5	1096	43 ¹ / ₈

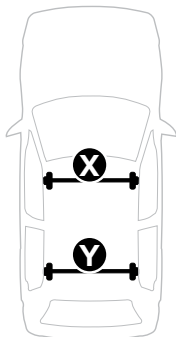
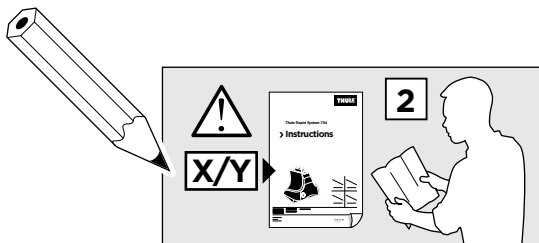


	Y (scale)	Y (mm)	Y (inch)
MITSUBISHI Pajero , 5-dr SUV, 99-06	44,5	1096	43 ¹ / ₈
MITSUBISHI Montero , 5-dr SUV, 99-06	44,5	1096	43 ¹ / ₈



2

MITSUBISHI Pajero, 5-dr SUV, 99-06

MITSUBISHI Montero, 5-dr SUV, 99-06

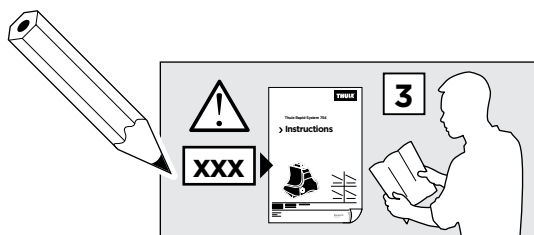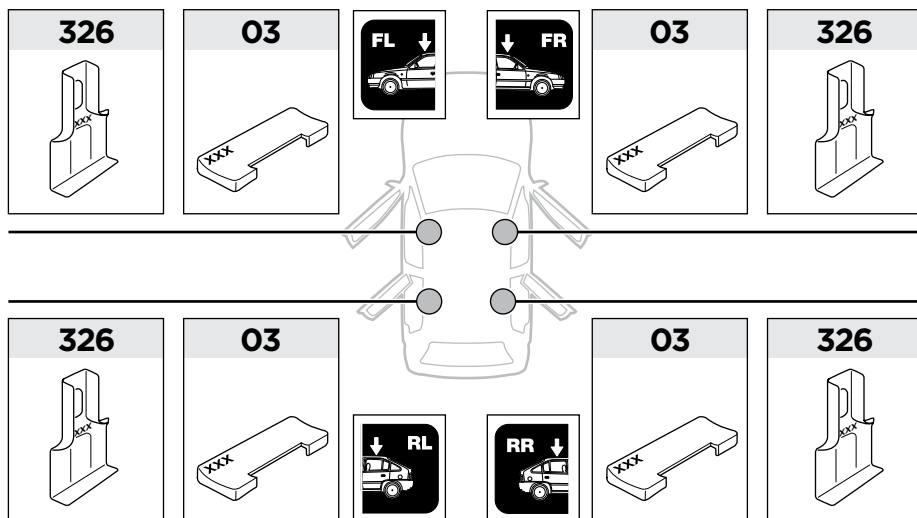

3

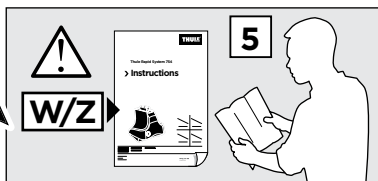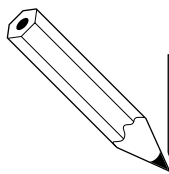

	W (mm)	Z (mm)	W (inch)	Z (inch)
MITSUBISHI Pajero , 5-dr SUV, 99-06	595	750	23 ³/₈	29 ¹/₂
MITSUBISHI Montero , 5-dr SUV, 99-06	595	750	23 ³/₈	29 ¹/₂

