






YAKIMA FrontLoader




Type of Rack	Load	Min. and Max. Crossbar Spread*	Limits
 Round Bar  Square Bar  Factory Bar	 1 or 2 bikes 3 or more bikes	16" - 42" 41cm - 107 cm 18" - 42" 46 cm - 107 cm	 16" (41 cm) spread = 30 lbs. (13.6kg)/bike 18" (46 cm) spread = 40 lbs. (18.1kg)/bike

DO NOT EXCEED RACK WEIGHT LIMITS!


*CROSSBAR SPREAD

Your *crossbar spread* is the distance between the crossbars.

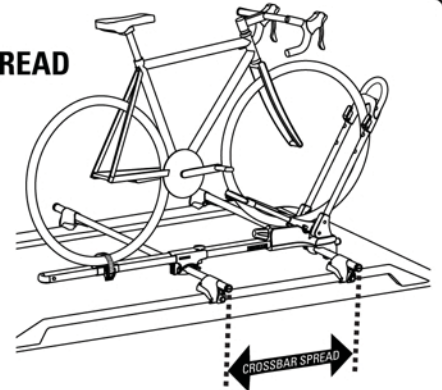

If you have factory crossbars, be sure you have at least 1-1/2" (3.8 cm) of clearance between the bottom of the crossbar and the vehicle roof.

FRONTLOADER (1X)

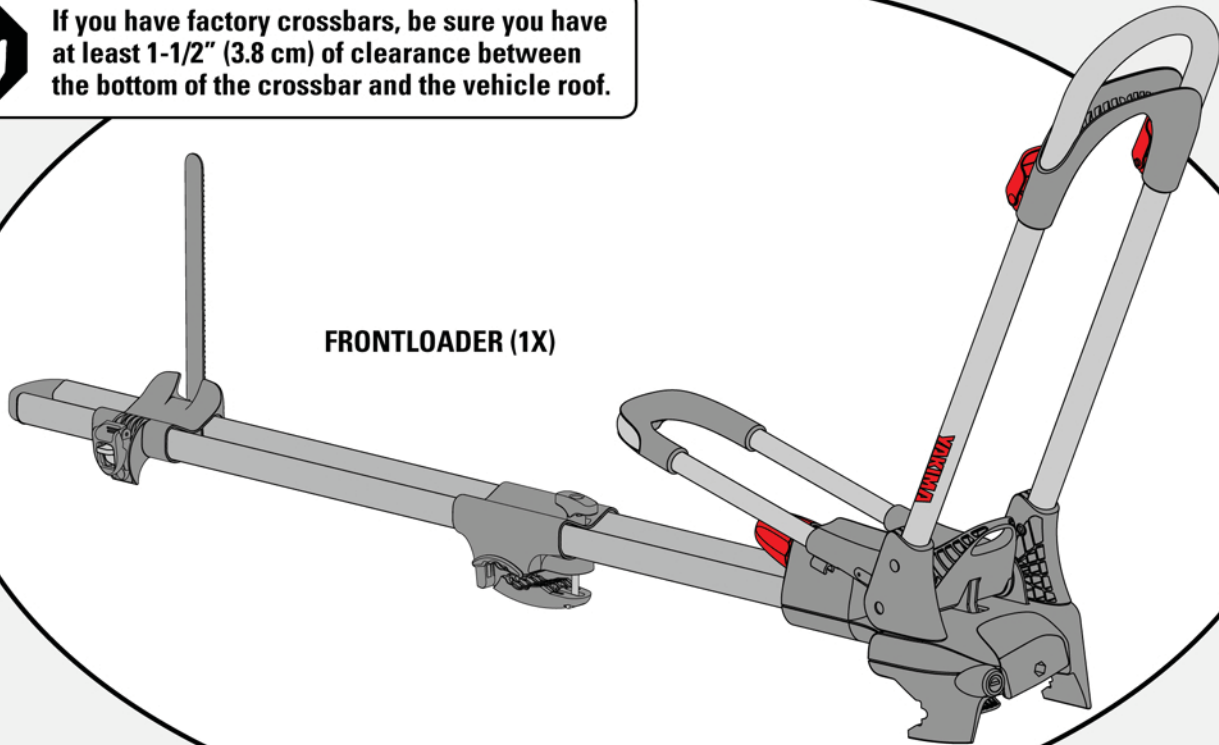


IMPORTANT WARNING

IT IS CRITICAL THAT ALL YAKIMA RACKS AND ACCESSORIES BE PROPERLY AND SECURELY ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH TO YOU OR TO OTHERS. YOU ARE RESPONSIBLE FOR SECURING THE RACKS AND ACCESSORIES TO YOUR CAR, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR, AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS SUPPLIED WITH YOUR YAKIMA PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER.


Part #1033564 Rev.B

6 Lock your bike.

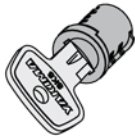



INSTALL OPTIONAL LOCK CORES (sold separately).

If you have purchased locks, follow your lock core instructions to install. To purchase lock cores (Yakima Part Number 8007202) (2-pack) visit www.yakima.com or visit your local Yakima dealer.

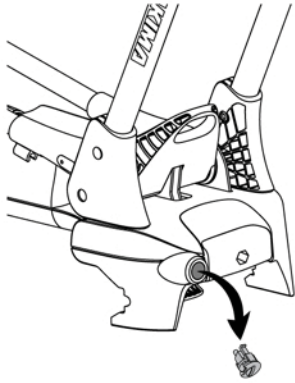

Follow the instructions that came with your lock cores to remove the lock plug and install your lock cores.


NOTE: Front knob must be in horizontal position to lock.

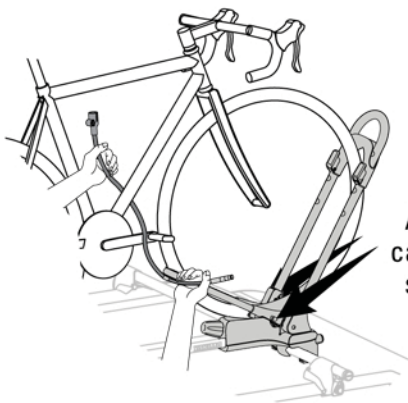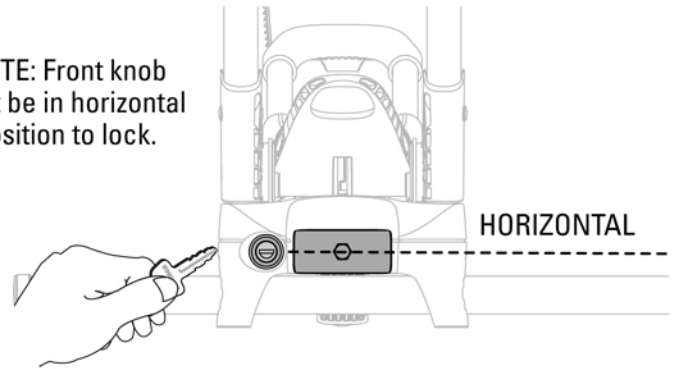


Follow the instructions that came with your lock cores to remove the lock plug and install your lock cores.

Access the built-in lock cable on either side of the small hoop. Store cable here when not in use.

Thread the cable through your bike frame, and insert silver post into lock housing.

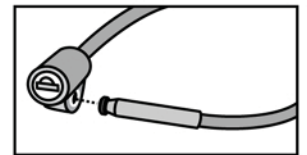


Turn the key counter-clockwise to lock.

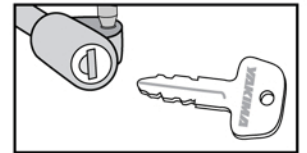


✓ BEFORE DRIVING AWAY

• CHECK REAR WHEEL.

Tighten the strap if needed.

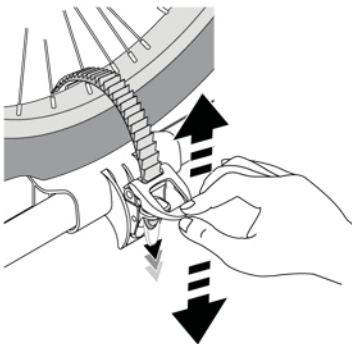

• PERIODICALLY CHECK THAT KNOBS ARE ADEQUATELY TIGHTENED.

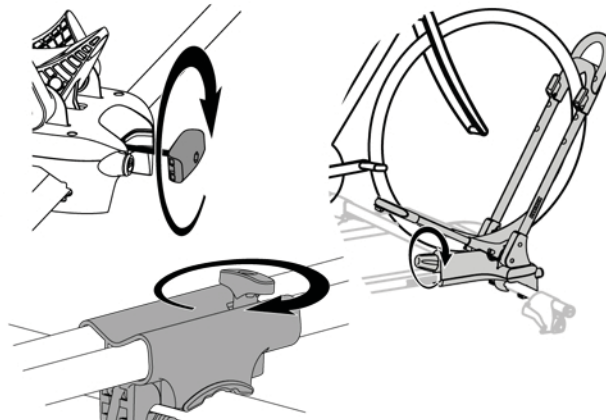


• CHECK THAT FRONT WHEEL IS SECURE.





Continued on next page...

3 Wheel Setting

Slide the wheel grip until the number matching your wheel size is visible through the window.





Look at your bike's tire to find your wheel size. Open the red levers on the wheel hoop to adjust wheel grip height.

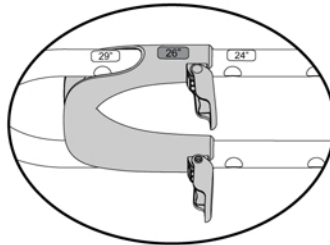

CLOSE RED LEVERS.



4 Load bike.

Open wheel hoop.

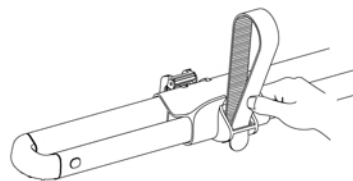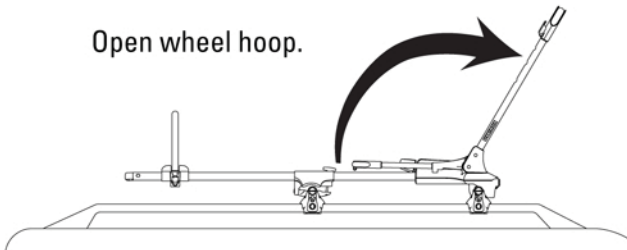

Tuck wheelstrap into the slot to make way for the tire.

Lift your bike up and align front wheel with hoop while rolling forward. The small hoop will automatically adjust to your wheel.

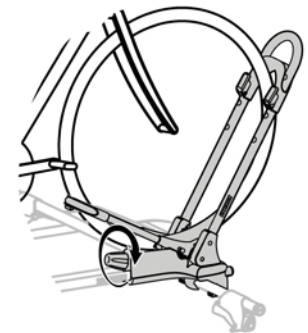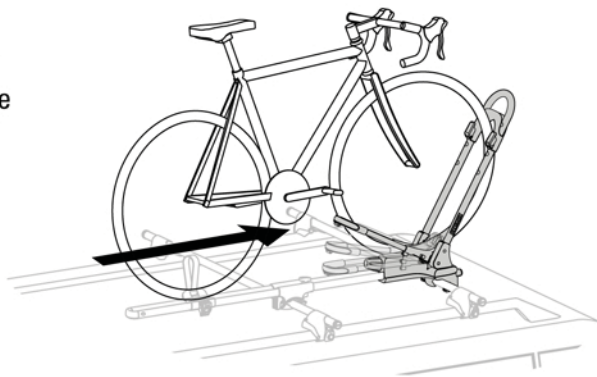


Turn the knob clockwise to tighten hoop.


5 Secure rear wheel.

Pull strap through wheel spokes.

Do not let strap push against valve stem.

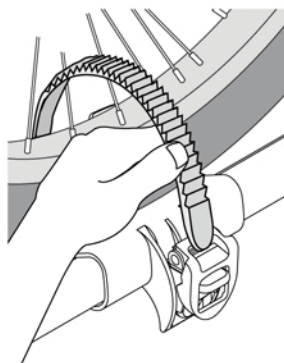

Insert strap end into buckle.

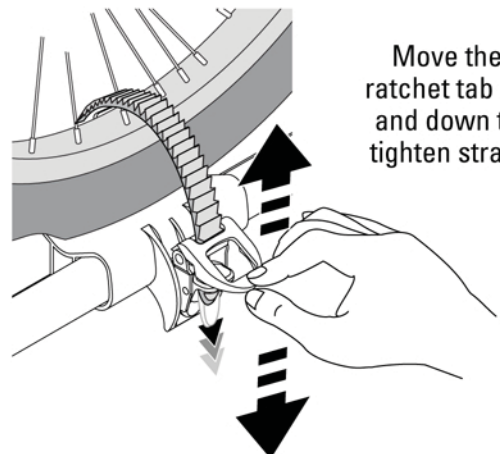


Move the ratchet tab up and down to tighten strap.





The rear clamp is configured for typical installations. In some situations adjustment may be necessary if the wheel makes contact with the rear knob, or if the wheeltray cannot reach the wheel.


OPTION A
Wheel behind
rear crossbar.

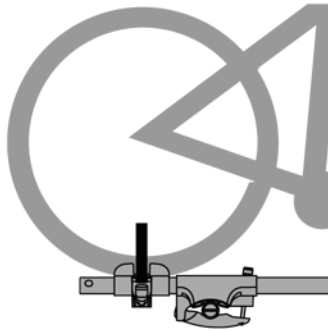


OPTION B
Wheel ahead of
rear crossbar.

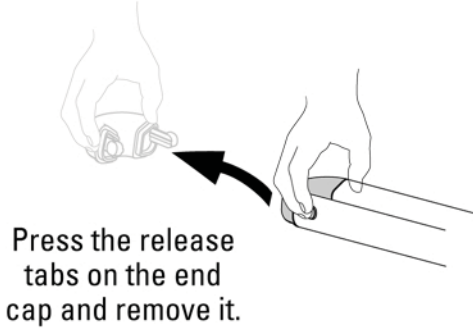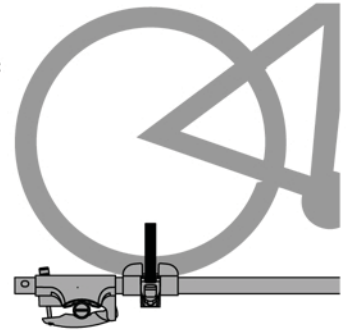

Press the release
tabs on the end
cap and remove it.


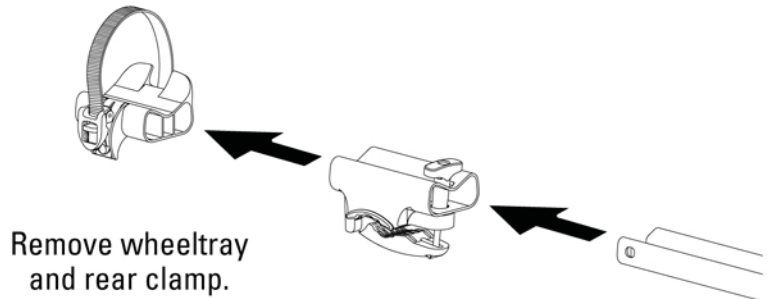


Remove wheeltray
and rear clamp.

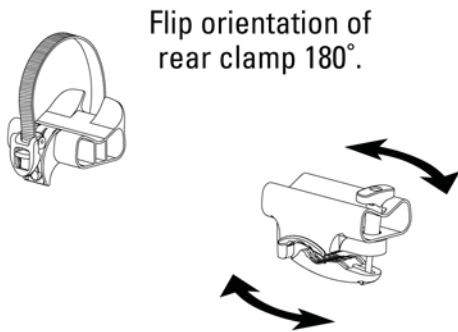


Flip orientation of
rear clamp 180°.

NOTE: You can flip the wheeltray or rear clamp independently as needed. For instance if you needed the buckle on the opposite side you could flip the wheeltray as shown.

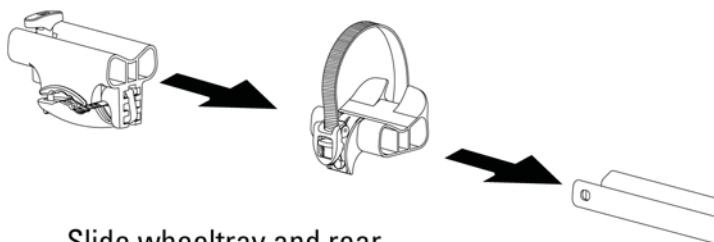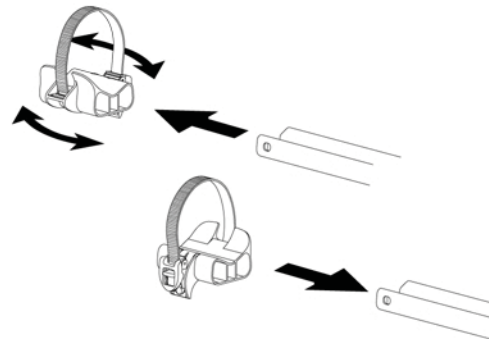


Slide wheeltray and rear
clamp back onto forks.

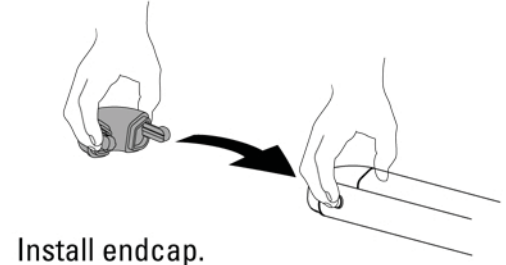

Install endcap.


1 Place FrontLoader onto crossbars.

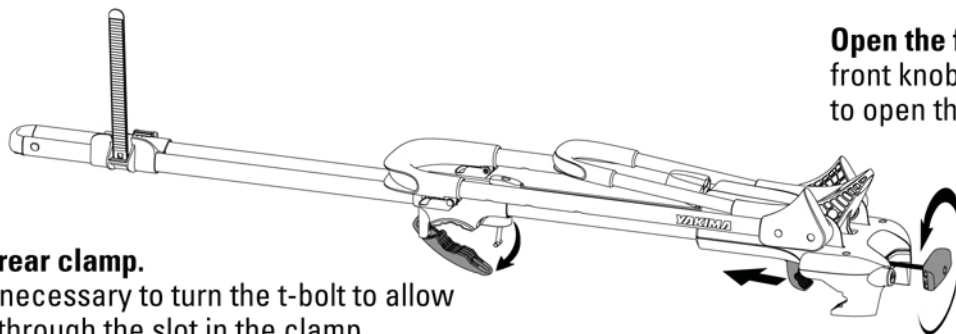


Open the front clamp. Turn the front knob counter clockwise to open the front the clamp.

Open the rear clamp.
It may be necessary to turn the t-bolt to allow it to pass through the slot in the clamp.

Lower the front clamp into place over front crossbar.

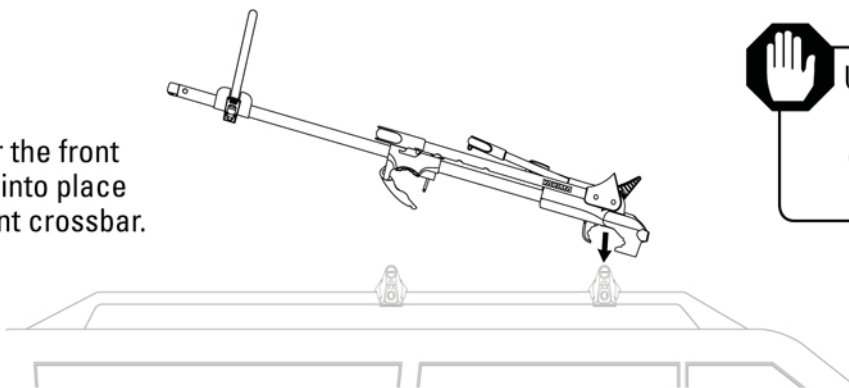


Use caution to avoid damaging roof's finish. A towel placed on the roof prior to installation can help avoid scratches.

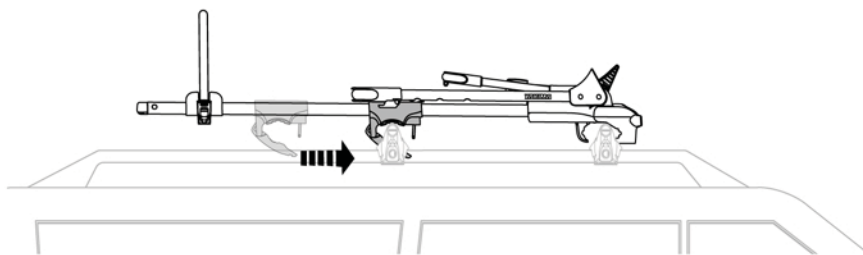


Slide the jaw of the rear clamp under rear crossbar.

2 Tighten clamps.

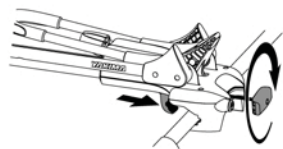


Tighten the front clamp.
Turn the knob clockwise to completely tighten the front clamp around crossbar.

Tighten the rear clamp.
Close rear clamp around rear crossbar.

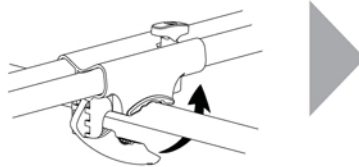


Turn the knob clockwise to completely tighten the rear clamp.

Pass the t-bolt through the opening in bail.
Rotate t-bolt to rest in slot in bail.

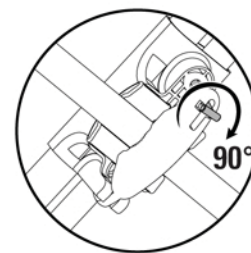

90°

Adjust clamp if necessary.

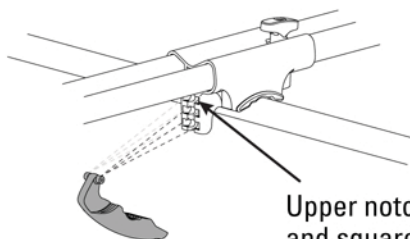


Upper notch for round and square bars.




If you don't get a secure grip with your factory bars adjust your clamp.

For factory bars choose the best position for most secure grip.

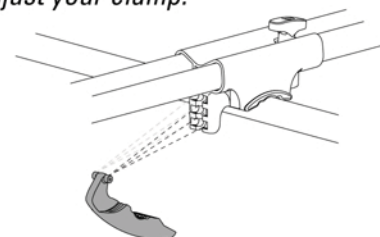


...before driving away.

CHECK FRONT WHEEL ATTACHMENT TO BICYCLE FRAME.

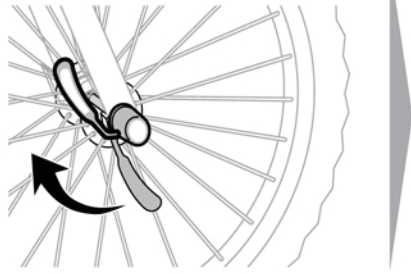

MAKE SURE YOUR TIRES ARE FILLED TO RECOMMENDED PRESSURE FOUND ON THE TIRE.

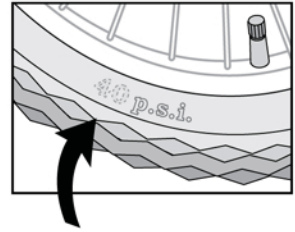

Be sure to read all the warnings and warranty information contained in the insert accompanying these instructions!



IF YOU REMOVE CARRIER, FOLLOW INSTRUCTIONS TO REINSTALL.

Follow safety checks after every installation.




WARNING: BE SURE ALL HARDWARE IS SECURED ACCORDING TO INSTRUCTIONS. ATTACHMENT HARDWARE CAN LOOSEN OVER TIME. CHECK BEFORE EACH USE, AND TIGHTEN IF NECESSARY.


WEIGHT LIMITS



Follow the YAKIMA Fit List or check online at Yakima.com for your rack's weight limit. Do not exceed the weight limit of your vehicle's rack.



RACK



**THIS PRODUCT
(12.5 lbs. / 5.7 kg)**



**LOAD
(40 lb / 18 kg maximum)**



Not more than 165 lbs. (75 kg) unless otherwise noted.

**(Some vehicles will be rated lower than 165 lbs. (75 kg))*

KEEP THESE INSTRUCTIONS!